

# Inflation adaptor

- 1 Use the inflation adaptor as screwdriver to remove the white valve plug.
- 2 Screw in the adaptor until it tightens.
- 3 Various models of inflation nozzles and pumps can be used for inflation.
- 4 DO NOT over-inflate the fender/buoy.
- 5 After inflation screw back in the valve plug.



[www.danfender.com](http://www.danfender.com)

The **Quality** that **makes** a **difference**