

## INSTALLATION INSTRUCTIONS

### For U-cup and O-ring Seal Kit

P/n: 12731



From the top of the piston, carefully using a flathead screwdriver, stretch a U-Cup seal over and past the first slot and into the second slot of the piston.

Then from the top of the piston stretch the other U-Cup seal over the top and into the first slot of the piston. Now stretch the O-Ring seal over and into the top U-Cup seal that is in the first slot of the piston.

**No O-Ring is needed in the U-Cup Seal in the second slot.**

Refill reservoir only when tabs are in an up position. Use any type of hydraulic transmission fluid to refill reservoir.

