



STARTUP CHECKLIST

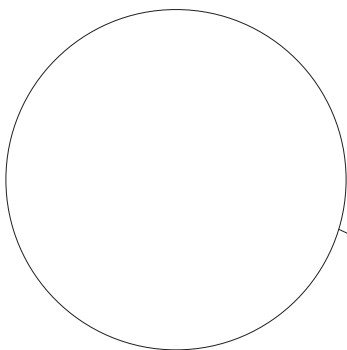

ZERO PITCH & ROLL ANGLES?

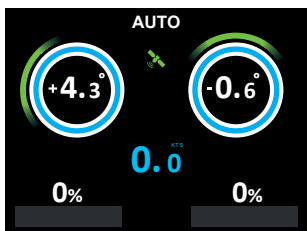

NO → RESET → **FLIP**

YES
↓
OK


CORRECT BOAT DATA?

Boat Data	
- Boat Length	9 m
- Boat Beam	2.5 m
- Boat Weight	5000 kg
- Hull Type	Mono

A: Press MENU
B: Select AUTO Setup
C: Select Boat Data
D: Change if incorrect

↓
OK


GREEN GPS SYMBOL?

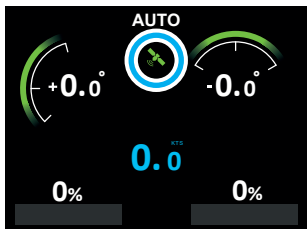

NO → SOURCE → **FLIP**

YES
↓
OK

IS AUTO ON?

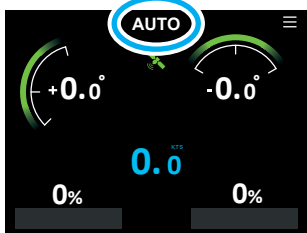


NO →




↓
OK

YES → **OK** → **GO!**

STARTUP CHECKLIST

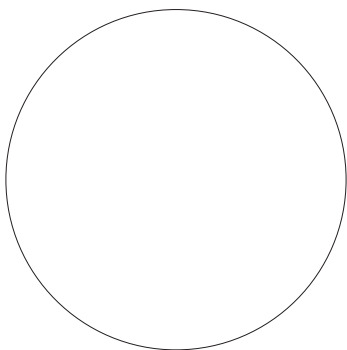

RESET PITCH & ROLL ANGLES

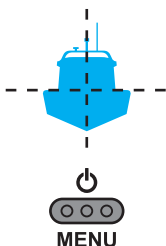

A: Level the boat

B: Press MENU



C: Reset Pitch & Roll



CHANGE GPS SOURCE



A: Press MENU



B: Select GPS Source

C: Change Source



Refer to the Operator's Manual provided with your Zipwake System for full instructions and safety warnings.