

SEAFLO[®]

Water Alarm




Instruction Manual




SFWA1-01
SFWA2-01

A safety reminder device integrating vision and hearing
Allows an unarmed compartment to be constantly monitored

DIMENSION DRAWING

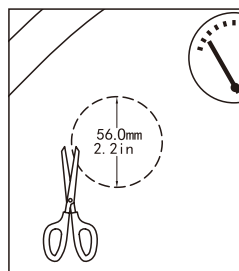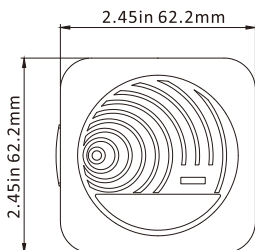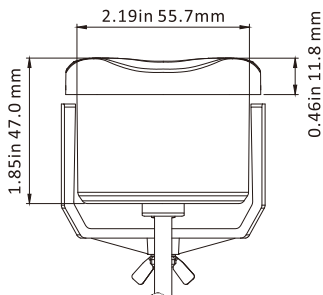

WIRING

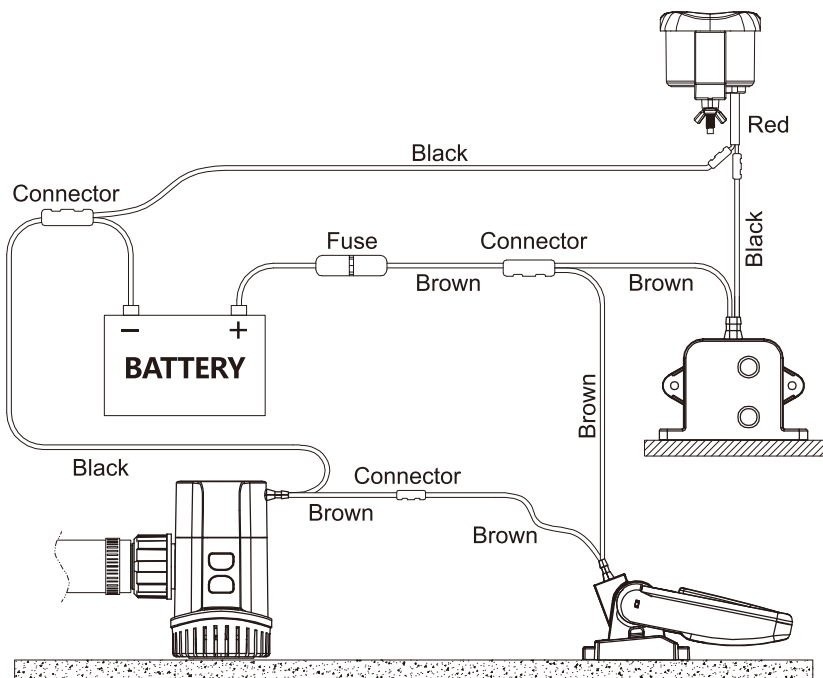

STANDARD CONFIGURATIONS

Model Number	Voltage	Current	Alarm volume	N.W.	Wire Gauge Size /length
SFWA1-01	12V DC	0.1 Amps. Max	≥95DB	0.1KG	28AWG/150mm
SFWA2-01	24V DC	0.1 Amps. Max	≥95DB	0.1KG	28AWG/150mm

⚠ CAUTION

1. Disconnect power from the system before working on the unit to avoid personal injury, damage to the surrounding environment and/or damage to the unit.
2. Install red wires to positive terminal only and black to negative terminal only.
3. Keep all wire connections above the highest water level. Wires must be joined with butt connectors and a marine grade sealant to prevent wire corrosion.