



SmartRemote Menu Structure

Enter the main menu by pressing both the left + the right button at the same time, for less than 3 seconds.

Main menu:

- Enter standby (pressing any button will turn the SmartRemote back on)
- Brightness
- Auto standby
- Language
- Paired language
- Unpair device
- About
- Exit menu

The SmartRemote will exit the main menu if no button is pressed within 10 seconds, or when you select "Exit menu".

Shaded fields have the focus.

Enter standby		
At any time pressing left and right button for 3 seconds will shutdown the SmartRemote		
✓		✗

Press ✓ to shutdown the SmartRemote immediately.

Press ✗ to return to the Main menu.

Brightness		
100%		
✓	↑	↓

Press the up or down button to increase or reduce the brightness in steps of 5%.

Press ✓ to confirm your choice and return to the Main menu.

Auto standby		
Never		
✓	↑	↓

By default, the SmartRemote does not shut down automatically.

Other options are: 2, 5, or 10 minutes.

Press ✓ to confirm your choice and return to the Main menu.

(Paired)Language		
English		
Nederlands		
Deutsch		
✓	↑	↓

Language is the language of the SmartRemote itself.

Paired language is the language of the connected device.

Press ✓ to confirm your choice and return to the Main menu.

Unpair device		
Are you sure?		
✓		✗

Press ✓ to unpair the device from the SmartRemote immediately.

Press ✗ to return to the Main menu.

About		
Version: 1.1.9 Revision: AA0101 Bootlaoder ver.:0.1.0 Bus voltage: 13.35V		
✓		

Information "About" the SmartRemote.

Press ✓ to return to the Main menu.