



# BOAT FLOORING

## INSTALLATION INSTRUCTION


---

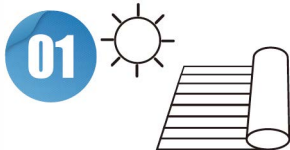

Unroll the mat in a warm environment, such as in the sun or a heated room. The warmth makes the mat softer and easier to flatten.

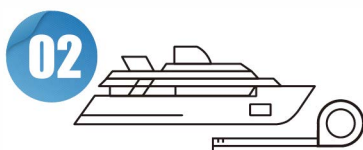


While the mat is warming up and unrolling, measure the area on the boat where the mat will be installed. Use a measuring tape or a template to ensure a precise fit.

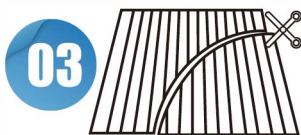

Cut the mat to the desired shape with sharp scissors or a knife if necessary. Ensure it fits perfectly in the intended area.



Thoroughly clean the surface where the mat will be installed. Make sure the area is completely free of dirt, grease, or dust for optimal adhesion.

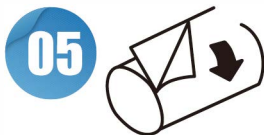

Remove the protective film from the 3M tape on the back of the mat. Carefully place the mat and press it firmly onto the surface.



If the installation surface has anti-slip patterns or other irregularities, an additional layer of spray adhesive can be applied to the boat deck before installing the mat. This ensures a stronger and more durable bond.