

Tron SART20

Radar Transponder User Manual



This page is intentionally left blank

Abbreviations

EIRP	Effective Isotropic Radiated Power
GHz	Gigahertz
GMDSS	Global Maritime Distress and Safety System
IEC	International Electrotechnical Commission
IMO	International Maritime Organization
ITU	International Telecommunication Union
LED	Light Emitting Diode
MED	EU Marine Equipment Directive
NM	Nautical mile
SART	Search and Rescue Transponder
SOLAS	Safety of Life at Sea (An international maritime safety treaty)
VHF	Very High Frequency

Table of Contents

1	List of Figures	6
2	List of Tables	7
3	General	8
4	Standards	9
5	Product description	11
6	Functional description	13
	6.1 Transmitter module.....	13
	6.2 Battery module.....	14
	6.3 Bottom lid.....	15
7	Installation	16
	7.1 Brackets.....	16
	7.1.1 Mounting the wall bracket.....	16
	7.1.2 Mounting a lifeboat bracket.....	18
	7.2 Non bracket mounting options.....	21
	7.2.1 Mounting the lanyard.....	22
	7.2.2 Mounting the Liferaft mounting strap.....	23
	7.2.3 Mounting the telescopic pole.....	23
	7.3 Replacing the battery module.....	25
	7.3.1 Disassembly.....	25
	7.3.2 Assembly.....	26
8	Operation instructions	28
	8.1 Activation.....	28
	8.2 Deactivation.....	29
9	Maintenance	29
	9.1 Testing.....	30
10	Test and maintenance records	33
11	Battery safety information	34
	11.1 Handling and storage.....	34
	11.1.1 Transportation.....	34
12	Technical specifications	35
	12.1 Product specification.....	35
	12.2 Radar transponder.....	35

12.3	Brackets.....	36
12.3.1	Wall bracket	36
12.3.2	Lifeboat bracket	36
13	Optional accessories.....	36
14	Spare parts.....	36
14.1	Counterfeit spare parts.....	36
15	Recycling and disposal.....	36
16	Warranty.....	37
17	Service	37
17.1	Service agents	37
18	Document revision log.....	38

1 List of Figures

Figure 1 Tron SART20.....	12
Figure 2 Illustration: Tron SART20 disassembled	13
Figure 3 Illustration: Transmitter module	13
Figure 4 Image: Tron SART20 battery label	14
Figure 5 Illustration: Battery label on housing	14
Figure 6 Illustration: Battery module (no cable or connector)	15
Figure 7 Illustration: Bottom lid.....	15
Figure 8 Illustration: Wall bracket dimensions.....	16
Figure 9 Illustration: Tron SART20 mounted in wall bracket	17
Figure 10 Illustration: Placement of Tron SART20 in a wall mount	17
Figure 11 Illustration: Lifeboat bracket disassembled	18
Figure 12 Illustration: Lifeboat bracket dimensions.....	19
Figure 13 Illustration: Mounting - interior/exterior wall.....	20
Figure 14 Illustration: Mounting on a pipe.....	20
Figure 15 Illustration: Mounted ready on a pipe	21
Figure 16 Illustration: Placing the Tron SART20 into the lifeboat bracket... 21	
Figure 17 Illustration: using the lanyard on a lifeboat	23
Figure 18 Image: Tron SART20 with the Liferaft mounting strap attached .23	
Figure 19 Illustration: Tron SART20 with telescopic pole attached	24
Figure 20 Illustration: using the telescopic pole on a lifeboat	25
Figure 21 Image: Tron SART20 operating instructions label.....	28
Figure 22 Image: Tron SART20 - Test instruction label	32

2 List of Tables

Table 1 List of components - lifeboat bracket.....	19
Table 2 Maintenance requirements	29

3 General

Jotron manufactures safety products designed for search and rescue of human lives and property. For this product to be effective according to the design parameters, it is imperative that it is handled, maintained, serviced and stowed in accordance with this manual.

All information contained within this manual has been verified and is to Jotron's knowledge correct. Jotron reserves the right to make changes to any product(s) or module(s) described herein to improve design, function or reliability without further notice.



Jotron is not liable and cannot be held responsible for any injury or damages caused directly or indirectly by an error or omission of information, incorrect or misuse, breach of procedures or failure of any specific component or part of this product.

Jotron documentation can be downloaded from jotron.com.

4 Standards

Jotron declares that this this product is compliant in accordance with IMO, SOLAS and GMDSS regulations.

A copy of the declaration of conformity can be downloaded from jotron.com.

The Tron SART20 has been verified, tested and meets the following product standards:

Commission Directive 2009/26/EC	Testing standards for international instruments, lifesaving marine equipment.
COMSAR/Circ. 32 (Aug. 2004)	Harmonization of GMDSS requirements for radio installations on board SOLAS ships.
IEC 61097-1:1992 (withdrawn)	Global maritime distress and safety system (GMDSS) - Part 1: Radar transponder - Marine search and rescue (SART) - Operational and performance requirements, methods of testing and required test results.
IEC 61097-1:2007	Global maritime distress and safety system (GMDSS) - Part 1: Radar transponder - Marine search and rescue (SART) - Operational and performance requirements, methods of testing and required test results.
IEC 60945-4:2002	Maritime navigation and radiocommunication equipment and systems - General requirements - Methods of testing and required test results.
IMO Resolution MSC.97 (73) 14.7.1.3	International code of safety for high-speed craft (2000) (Instructions for the guidance of surveyors).

IMO Resolution MSC.247 (83)	Performance standards for survival craft radar transponders for use in search and rescue operations.
IMO Resolution MSC.256 (84)	International convention for the safety of life at sea. Includes: construction (structure and electronics), construction (fire protections, detections, and extinction), Life-saving appliances and arrangements and radiocommunications.
IMO Resolution - A.530 (13)	Use of radar transponders for search and rescue purposes.
IMO Resolution - A.802 (19)	Performance Standards for Survival Craft Radar Transponders for Use in Search and Rescue Operations.
IMO Resolution - A.694 (17)	General requirements for shipborne radio equipment forming part of the global maritime distress and safety system (GMDSS) and for electronic navigation aids.
ITU-R M.628-3 (11/93)	Technical characteristics for search and rescue radar transponders.
SOLAS (74 amended) Chapter IV/7.1.3	Radiocommunications.
SOLAS (74 amended) Chapter III Regulation 6.2.2	Communications - Search and rescue locating devices
SOLAS (74 amended) Chapter III Regulation 26. Additional requirements	This regulation applies to ro-ro passenger ships.
SOLAS (74 amended) Chapter IV, Regulation 7.1.3	Required radio communication equipment on mobile offshore units.

5 Product description

The Tron SART20 is a 9 GHz radar transponder in a sealed waterproof and buoyant enclosure. It is water, oil and sunlight resistant. The Tron SART20 is designed for easy operation and can withstand a drop of 20 meters into water.

A radar transponder is a location device. The purpose of the Tron SART20 is to assist a seafarer in distress during a search and rescue operation.

When the Tron SART20 is interrogated by a radar signal, it will immediately start to transmit several sweeps covering the complete maritime 3cm radar band. The sweeps are used to navigate directly towards the Tron SART20 which is located on a lifeboat/liferaft.

A radar transponder should respond when interrogated by a shipborne X-band radar with a scanner height of 15m within 8nm. The Tron SART20 will also respond when interrogated by a compatible X-band radar fitted to an aircraft operating at a height of 3000 feet at a distance of at least 30nm.

Tron SART20 includes the following components:

- Tron SART20 unit
- Mounting rope for lifeboat/liferaft
- Wall bracket



Figure 1 Tron SART20

6 Functional description

Tron SART20 consists of a housing sealed at the lower end with a bottom lid. It may be split into the following main parts:

- Transmitter module
- Battery module
- Bottom lid
- LED indicator

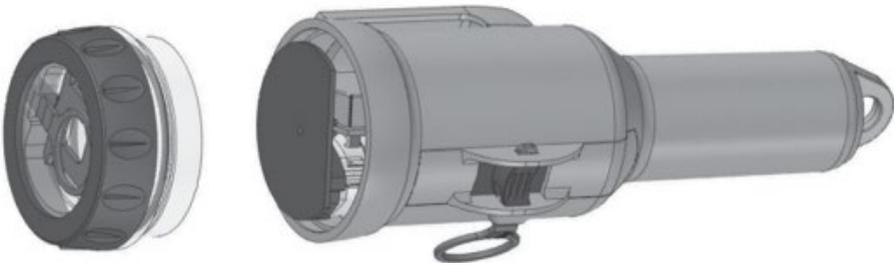


Figure 2 Illustration: Tron SART20 disassembled

6.1 Transmitter module

Tron SART20 transmitter module is inserted into the Tron SART20 housing. It consists of the transceiver board and antenna. It can be divided into the following sections:

- Transceiver board in metal box
- Antenna

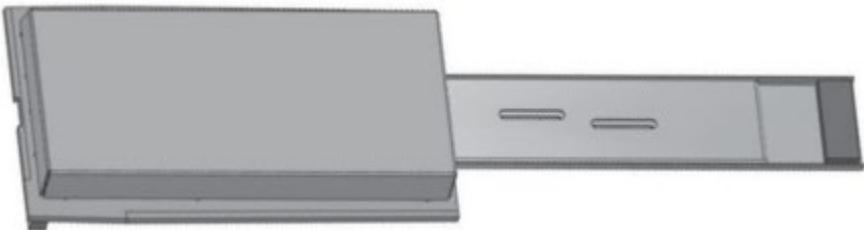


Figure 3 Illustration: Transmitter module

6.2 Battery module

The battery module consists of two C-size lithium batteries, a battery house and connector and cable. A battery expiry label on the Tron SART20 housing displays the expiry date. A new battery comes complete with cable and connector.

The battery module is inserted into the Tron SART20 housing. The battery label on the housing displays the battery expiry date.



Figure 4 Image: Tron SART20 battery label



Battery expiry
label

Figure 5 Illustration: Battery label on housing



The battery module is to be replaced every 5 years.



Only original Jotron batteries can be used with this product.

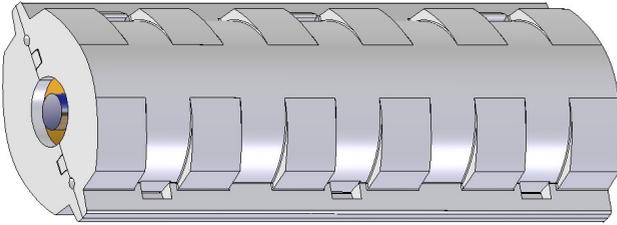


Figure 6 Illustration: Battery module (no cable or connector)

6.3 Bottom lid

The bottom lid includes four items:

1. Lanyard
2. Screen ring
3. Light tower
4. O-ring

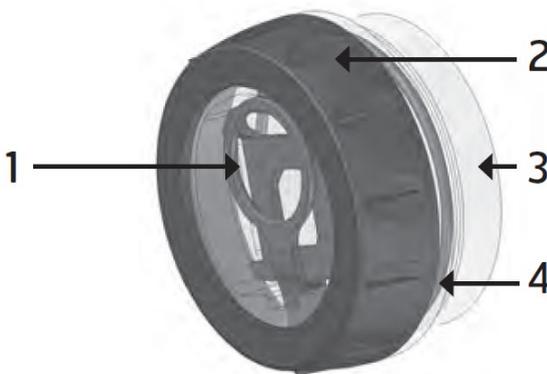


Figure 7 Illustration: Bottom lid

7 Installation

Tron SART20 can be mounted several ways near the emergency exit of the vessel. Normally, in the wheelhouse at the starboard or port exit (or both depending on the requirements) and inside a lifeboat/liferaft.

7.1 Brackets

There are two different mounting brackets available.

- Wall bracket
- Lifeboat bracket (with or without a pipe clamp)

7.1.1 Mounting the wall bracket

A wall bracket is delivered with the Tron SART20 and should be used for storage of the unit.



IMPORTANT

The bracket should be mounted in a vertical position and placed where the Tron SART20 is easily available in the case of an emergency.

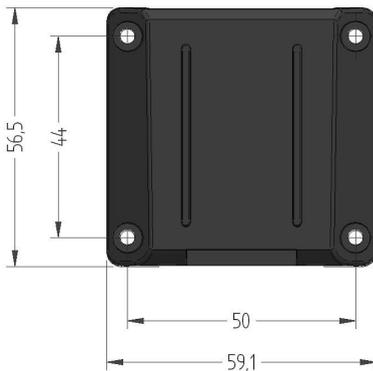


Figure 8 Illustration: Wall bracket dimensions

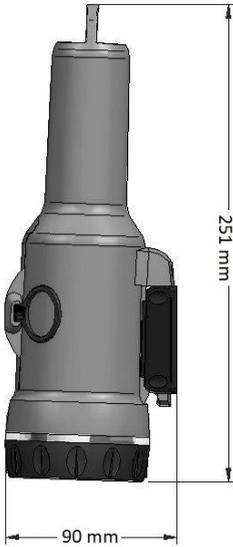


Figure 9 Illustration: Tron SART20 mounted in wall bracket

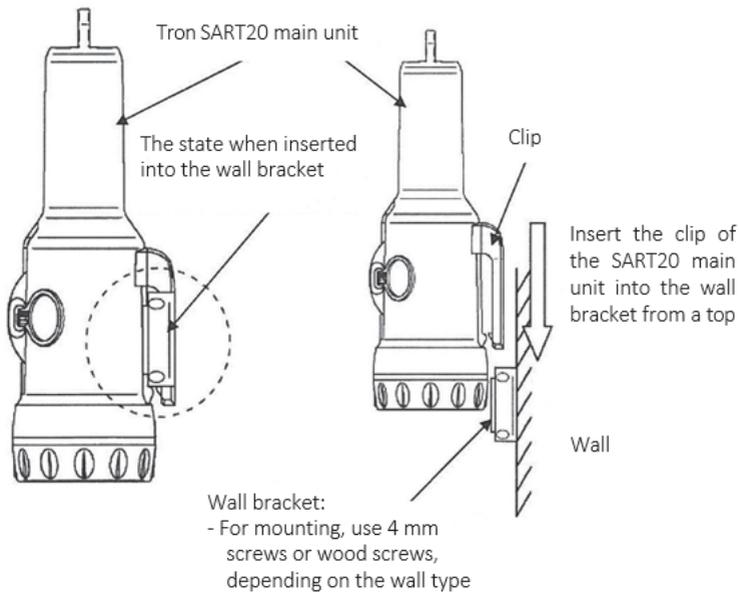


Figure 10 Illustration: Placement of Tron SART20 in a wall mount

7.1.2 Mounting a lifeboat bracket

The lifeboat bracket should be mounted vertically and as high as possible on the roof of the lifeboat. This bracket can be mounted either on a wall or a pipe.



IMPORTANT

The Tron SART20 must not be permanently stored in this bracket if mounted outside a freefall lifeboat. Move the Tron SART20 to this bracket after the lifeboat is deployed in water.

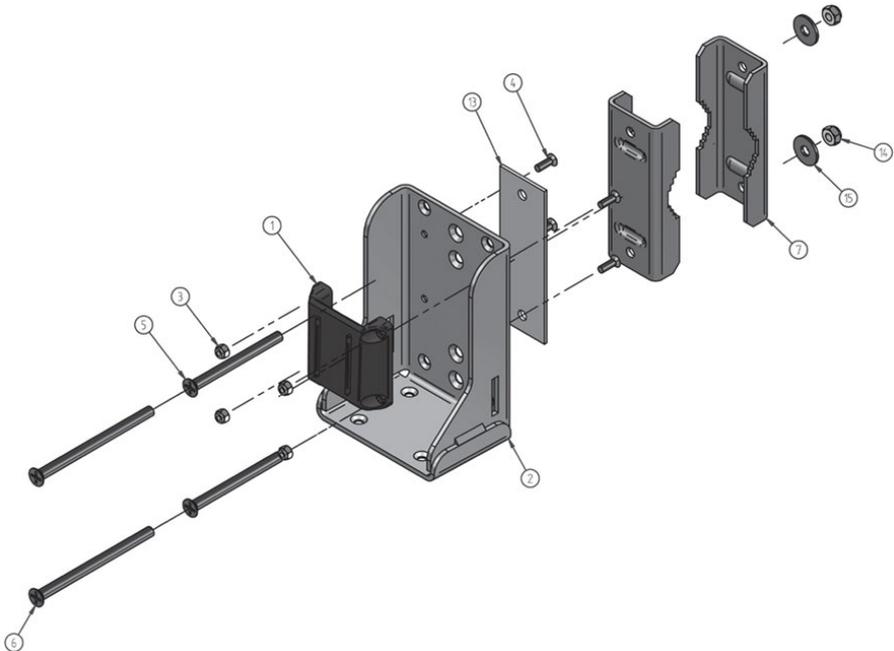


Figure 11 Illustration: Lifeboat bracket disassembled

Item no.	Document No.	Title
1	M-82746	Wall bracket
2	M-84163_VELDAMENT	M-84163_Bracket_Universal_Weldament D1
3	M-80312	Nut nylock M4 DIN 985
4	M-84676	Screw, DIN 965 – Pozidrive M4x12

5	M-84854	Screw, DIN 965 – Pozidrive M6x70
6	M-84855	Screw, DIN 965 – Pozidrive M6x90
7	M-84838	Pipe clamp
13	M-84875	Washer plate
14	M-91469	Nu nylock M6 DIN 985
15	M-82275	Washer, DIN 9021 – Ø6mm

Table 1 List of components - lifeboat bracket

Use the following dimensions when mounting the lifeboat bracket on a wall.

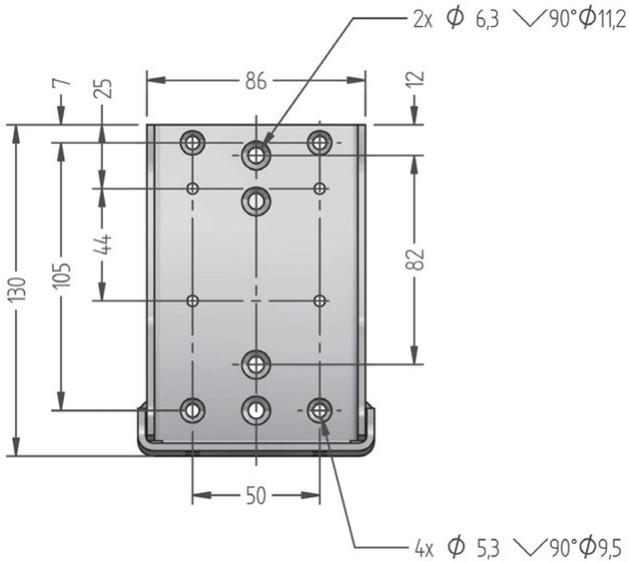


Figure 12 Illustration: Lifeboat bracket dimensions

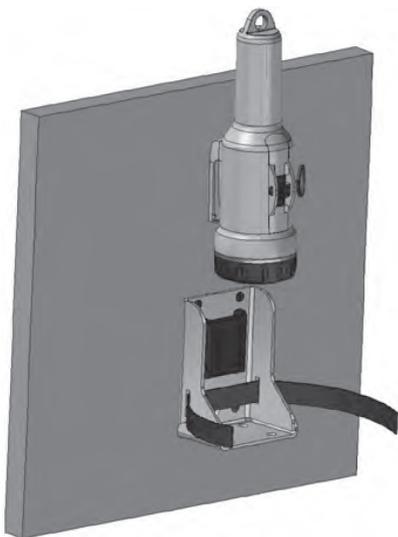


Figure 13 Illustration: Mounting - interior/exterior wall

The lifeboat bracket fits a pipe with a maximum diameter of 50mm.

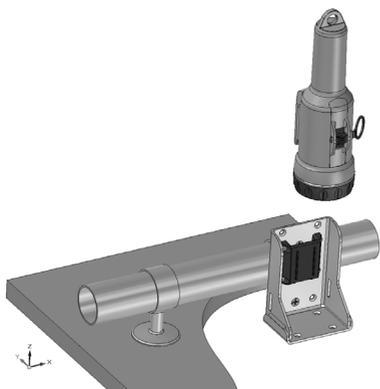


Figure 14 Illustration: Mounting on a pipe

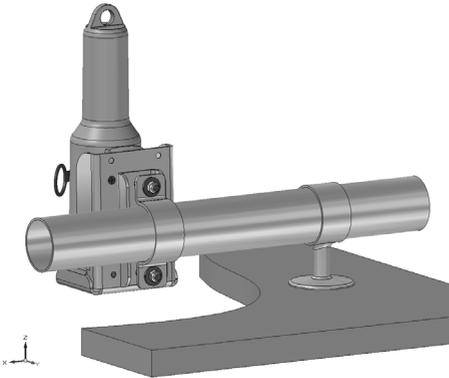


Figure 15 Illustration: Mounted ready on a pipe



Figure 16 Illustration: Placing the Tron SART20 into the lifeboat bracket

7.2 Non bracket mounting options

A Tron SART20 can be mounted on a lifeboat/liferaft without a bracket in several ways, choose one of the following:

- Lanyard
- Liferaft mounting strap
- Telescopic pole

7.2.1 Mounting the lanyard


The lanyard is stored in the bottom lid and is 10 meters in length. Use the lanyard to tie the Tron SART20 to any object inside the liferaft, where the unit can hang freely.




Keep the Tron SART20 away from any metal objects.

To mounting the lanyard, do the following:

1. Remove the lanyard.

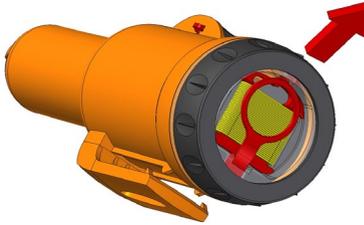

2. Roll the lanyard out.

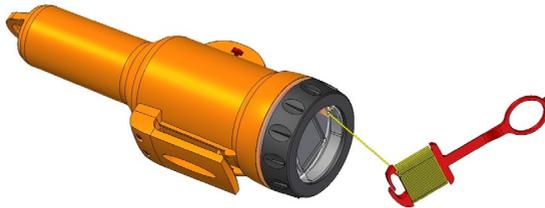

3. Thread the lanyard through the fastening ring on the top of the Tron SART20.
4. Fasten the lanyard to the canopy.

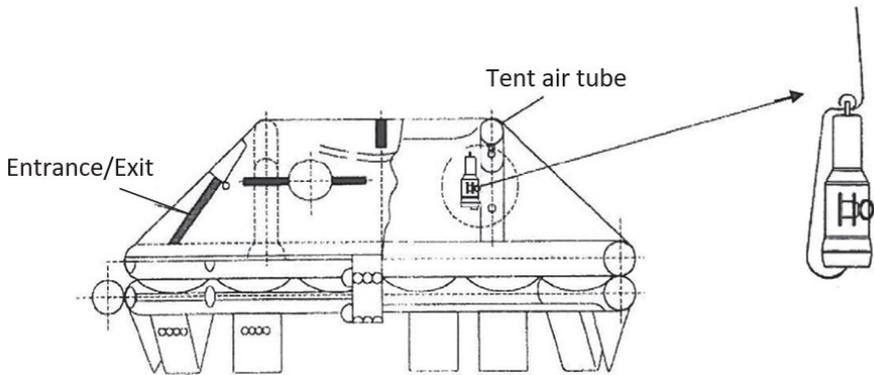


Figure 17 Illustration: using the lanyard on a lifeboat

7.2.2 Mounting the Liferaft mounting strap

A Liferaft mounting strap can also be used to attach the Tron SART20 to an inflatable canopy.

To use the Liferaft mounting strap, do the following:

1. Attach the strap to the fastening ring on the top of the Tron SART20.
2. Fasten the other end of the strap to the canopy.



Figure 18 Image: Tron SART20 with the Liferaft mounting strap attached

7.2.3 Mounting the telescopic pole

A telescopic pole can be used to extend the height of the Tron SART20 inside or outside the lifeboat/liferaft.



IMPORTANT

Ensure the rod is held as vertical as possible when activating the Tron SART20.

To use the telescopic pole, do the following:

1. Attach the Tron SART20 to the pole.
2. Extend the pole to its full length and lock it in place.



NOTE

Make sure the pole is locked by pulling hard when it is fully extended. The pole can be fastened or held by a person.

3. Lift the Tron SART20 up through the tent air tube and secure it.



Figure 19 Illustration: Tron SART20 with telescopic pole attached

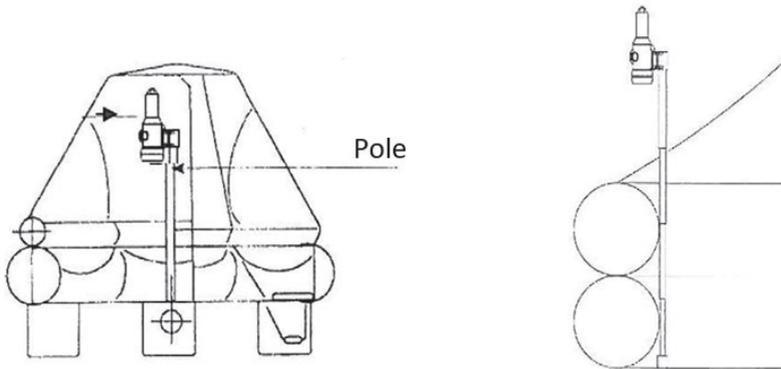


Figure 20 Illustration: using the telescopic pole on a lifeboat

7.3 Replacing the battery module

Below describes how to change the battery on the Tron SART20.

7.3.1 Disassembly

To disassemble the battery module, do the following:


1. Twist the rubber grip anticlockwise to remove the lid. If difficult, remove the rubber holder over the lid and try again.



2. Once open set aside the rubber holder and lid.



3. First, pull out the battery then pull out the cable from the connector.

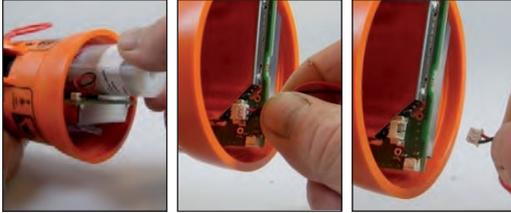

4. Remove the two old 5gram silica gel bag.



7.3.2 Assembly

To assemble the battery module, do the following:

1. Install the new battery, verify the cable is within the guide.



2. Connect the cable to the electronics (black = left & red = right)



3. Add two new 5grams silica gel bags.



4. Mount the rubber holder.



5. Remove old O-ring (using for example a plastic card). Use Vaseline (acid free) and fit a new O-ring in place.



6. Reinstall the lid (tighten by hand), then replace the rubber holder.



8 Operation instructions

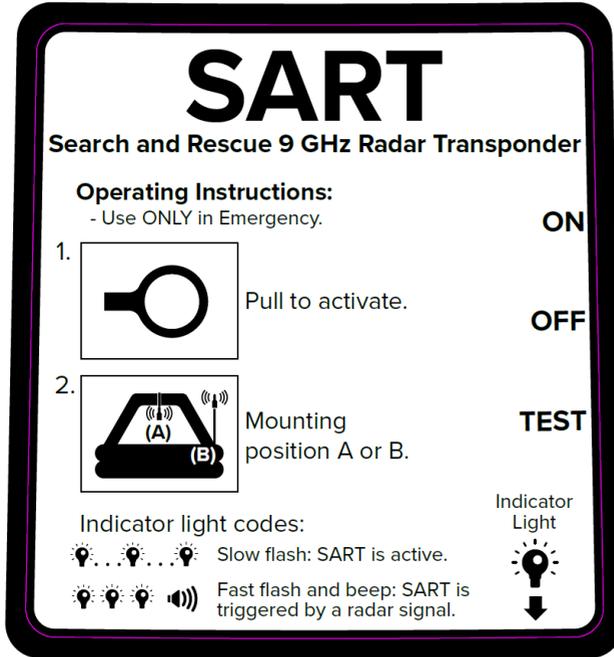


Figure 21 Image: Tron SART20 operating instructions label

The Tron SART20 should only be used in an emergency. The battery lasts for 96 hours from activation.



WARNING

Replace the battery if the unit is used for any purpose other than a test.

8.1 Activation

1. Pull the activation ring to activate.
2. Ensure the switch enters the ON position.



NOTE

The LED indicator starts to flash every 4 seconds and the unit will also beep.

- Secure the Tron SART20 to the lifeboat/liferaft in a vertical position and as high as possible.



NOTE

When in range of an active 3cm radar x-band, the internal loudspeaker will activate, and the flash will flash faster.

- Using a handheld VHF radio, contact with the approaching boat or helicopter.

8.2 Deactivation

- Move the switch to the OFF position.
- Replace the activation ring.

9 Maintenance

The Tron SART20 requires the following maintenance:

Timing	Requirements
Every month	Both the unit and the bracket should be inspected. The unit should be removed from the bracket and tested. Perform inspection and testing following the steps outlines in this manual.
Every 6 months	Both the unit and the bracket should be inspected. The unit should be removed from the bracket and tested. Perform inspection and testing following the steps outlines in this manual.
Every 5 years	Storage of a battery over a long period of time will reduce its capacity. To ensure long and reliable operation the battery unit must be replaced every 5 years. Battery replacement can be performed on board.

Table 2 Maintenance requirements

9.1 Testing

Although the Tron SART20 does not send an alarm via satellite, VHF or other radio communication, usage should be limited to short tests. This ensures the best battery capacity available for a potential emergency.

Do the following steps to test the Tron SART20:



IMPORTANT

The test should be conducted in open sea to avoid interference on the radar display from land echoes.

1. Move the switch to the TEST position and hold.



NOTE

Simultaneously a person should observe the radar display to check for correct pattern. The radar should be set to a 10NM range.

2. Release the switch when the LED start flashing.



NOTE

The Tron SART20 will now run through a self-test procedure.



CAUTION

When a Tron SART20 is activated, it will respond to any 3 cm radars within range. Tests must be as short as possible (5 min) to avoid interference and battery capacity loss.




NOTE

Test procedure instructions are also indicated on the product label.


Testing of the Tron SART20 is done using the ships own 3 cm X-band radar. Alternatively, a radar or a nearby ship can be used to test the unit. A ship-to-ship VHF channel should then be used to confirm operation.

The radar display will show different patterns depending on the range to the unit.


When the unit is located close to the radar the signals will appear as rings on the radar display. The rings may be broken in some sectors, depending on the construction of the ship and other obstacles, and does not indicate an error in the unit. Placing it further away will reduce the signals to 12 dots on the radar display, showing the direction to the unit.

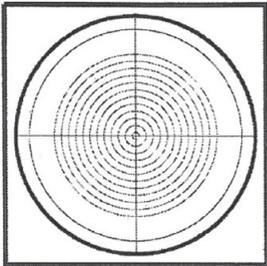

Typical display when Tron SART20 is located near (<0.2NM) the radar. Radar range is 10NM. Rings are off.

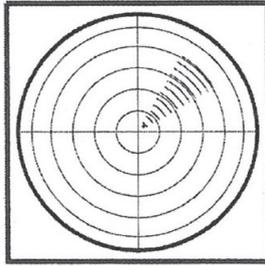

Typical display when Tron SART20 is located close (1NM) to the radar. Radar range is 10NM. Rings are at 2NM.

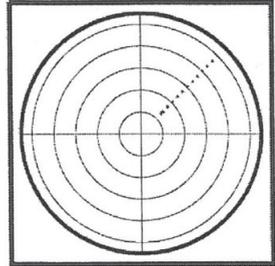

Typical display when Tron SART20 is located away (>2NM) from the radar. Radar range is 10NM. Rings are at 2NM.

Radars often have a special function to optimize reception of radar SART, either in TEST or ON. If the radar has this function, then it will be detuned out of the best tuning condition, and erases or weakens all normal radar echoes, however, SART echoes are not erased because SART frequencies scans over all the X-band from 9.2 to 9.5 GHz. When this function is

selected on the radar, the text “SART” is shown at the bottom of the display.



NOTE

Ensure the SART feature is turned off when SART detection is no longer necessary.

Tron SART20

Search and Rescue 9 GHz Radar Transponder



0470/xxxx



This device complies with GMDSS provision of part 80 of the FCC rules.

Compass safety distance 0.6 m
Безопасное расстояние по компасу 0,6 м





Test Instructions

- 1 Push switch to TEST position.
- 2 Observe indicator light flashing.
- 3 Return switch to OFF position.
- 4 See user manual for testing against the vessel's own radar.

Serial no:
Vessel:
FCC ID: VRV-TRONSART20
IC: 2131A-TRONSART20
CMIIT ID: 2010LJ3102

Jotron AS
Ringdalskogen 8
3270 Larvik
Norway
Tel: +47 33 13 97 00
jotron.com

Figure 22 Image: Tron SART20 - Test instruction label

11 Battery safety information

Type:	Primary lithium metal
Volts:	3.6V/cell
Approximate weight:	51grams/cell
Chemical system:	Primary lithium-thionyl chloride
Designated for recharge:	No

For information regarding the physical and chemical properties, the potential health and safety measures and the environmental effects of the battery used with this product, refer to the manufacturer's safety information documentation.

The safety information is available for download at [jotron.com - product](http://jotron.com/product).
<http://jotron.com/product/tron-sart20/>.

11.1 Handling and storage

This product should be stored in a cool and well-ventilated area. Elevated temperatures can result in a reduction of battery life. Locations that handle large quantities of lithium batteries must ensure the batteries are isolated from combustibles. A short circuit for a few seconds will not seriously affect the battery. A prolonged short circuit will cause the battery to lose energy, generate significant heat and can cause the safety release vent to open. The contents of an open battery, including a vented battery, when exposed to water, may result in a fire and/or explosion. Crushed or damaged batteries may result in a fire. A battery that is disassembled or exposed to water, fire or high temperatures can explode or leak causing burns.

11.1.1 Transportation

The product described in this manual is subject to follow special packing instructions and/or transportation regulations. Information regarding these regulations (in accordance with ICAO/IATA, IMDG code and/or ADR/RID) is included in the product safety information (PSI) and/or in the test summary report (TSR) (in accordance with UN test 38.3.5) and available for download at [jotron.com - product](http://jotron.com/product). <http://jotron.com/product/tron-sart20/>.

12 Technical specifications

12.1 Product specification

Battery type:	Primary lithium-thionyl chloride
Battery capacity:	7.2V/3.6Ah
Battery service life:	5 years
Materials:	
Housing:	Glass reinforced polycarbonate
Light cover:	Polycarbonate
Impact ring:	Thermo plastic elastomer
Unit dimensions (H/W/D):	250mm x 89mm x 89mm
Weight:	480grams
Temperature operating:	-20°C to +55°C (-4°F to +131°F)
Temperature storage:	-30°C to +65°C (-22°F to +149°F)
Operating life:	96 hours standby/+8 hours continuous operation at -20°C.
Lanyard length:	10meters
Lanyard strength:	>25kg

12.2 Radar transponder

Frequency:	X-band (3cm) (9.2-9.5 GHz)
Radiated power (EIRP):	> 400 mW (+26dB)
Sweep type:	12 sweep sawtooth type Forward 7.5 us \pm 1 us Return 0.4 us \pm 0.1 us Starts with return sweep
Receive sensitivity:	Better than -50 dBm e.r.s.
Response delay:	Max 0.5 us
Antenna pattern:	Horizontal polarization

12.3 Brackets

12.3.1 Wall bracket

Materials:	ASA (acrylonitrile styrene acrylate)
Bracket (incl. unit) (H/W/D):	250mm x 89mm x 90mm
Weight:	20grams

12.3.2 Lifeboat bracket

Materials:	Anodized aluminum
Dimensions (H/W/D):	130mm x 86mm x 90mm
Weight:	560grams
Release mechanism:	Jotron HRU

13 Optional accessories

For an overview of the available optional accessories for this product, refer to jotron.com.

14 Spare parts

For an overview of the available spare parts for this product, refer to jotron.com.

14.1 Counterfeit spare parts

Ensure that all spare parts being fitted to this product are only original spare parts manufactured or approved by Jotron.

Any use counterfeit parts will invalidate the product type-approval certificate.

15 Recycling and disposal

This product should not be disposed as normal waste and must be handled in accordance with the applicable federal, state and local waste disposal regulations in the country where the equipment is used.

16 Warranty

All Jotron products are warranted against factory defects in materials and/or workmanship during the warranty period. Refer to the sales terms and conditions for specific warranty information regarding this product.

17 Service

All services such as testing, installation, programming, replacement, marking and battery exchange are provided by an authorized Jotron service agent.

Improper service or maintenance may destroy the functionality and/or performance of this product.

Jotron does not accept any responsibility for the dismantling or reassembling of any Jotron product that occurs externally from a Jotron authorized facility and/or is handled by someone other than an authorized, trained and certified person.

17.1 Service agents

Refer to jotron.com for an overview of Jotron partners and distributors.
<https://jotron.com/partners-and-distributors/>

18 Document revision log

Document revision log			
Rev	Date	Reason for Issue	Author
A	14.09.2007	New product (24 pages)	ES
B	02.04.2008	Added text (page 10, 15)	ES
C	29.07.2008	Background (1 page)	ES
D	04.08.2008	Lifeboat bracket update (pages 15 & 16)	ES
E	14.08.2008	Battery label (pages 9, 13, 21)	ES
F	12.02.2009	Brackets and layout (pages 10-13-19, new total is 28 pages)	TH
G	16.12.2009	Added text (page 24)	ES
H	05.11.2010	Added information (pages 24 & 25)	FIT
I	01.02.2011	New images – figure 4.1.2b & 4.1.3 (page 15)	TH
J	14.04.2011	Updated information	TH
K	29.10.2014	Ms changed to us (page 12)	WB
L	21.12.2021	Updated content, revised text structure in a new documentation design and layout in accordance with new company profile.	WB



NORWAY / HEADQUARTERS

Jotron AS
Ringdalskogen 8
3270 Larvik, Norway
Tel: +47 33 13 97 00

SINGAPORE

Jotron Asia Pte. Ltd.
10 Ubi Crescent, Ubi Techpark
Lobby B, #05-11/12, Singapore 408564
Tel: +65 65 42 63 50

USA

Jotron USA, Inc
6300 Rothway Street, Suite C
Houston, TX 77040, USA
Tel: +1 713 268 1061

UK

Jotron UK Ltd.
Crosland Park, Cramlington
NE23 1LA, UK
Tel: +44 1670 712000

CHINA

Norway Jotron AS Beijing
Representative Office (ATC business)
No. 1204 room, building D
Tiejian plaza,
Chaoyang district Beijing 100012 China
Tel: +86 10 5619 6464

sales@jotron.com

jotron.com